
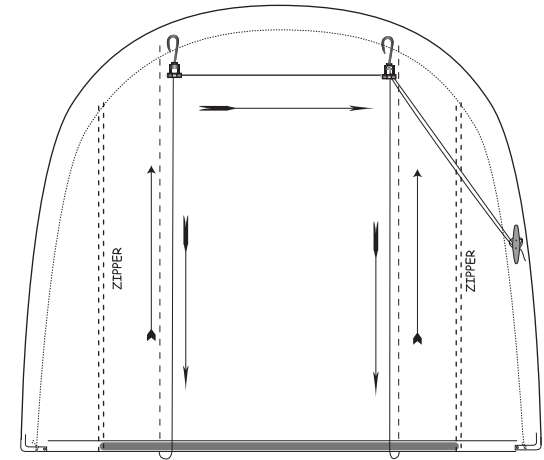


**STOP YOUR DOOR IN ANY POSITION**  
**EASY ENTRY AND CLOSING OF FABRIC DOORS**  
**ALL PARTS ARE WEATHER RESISTANT**  
**ROLL UP DOOR KIT WORKS ON EITHER END OF SHELTER**

**Roll Up Door Kit includes:**

- 2 Pulleys**
- 1 Roll of Rope**
- 2 Black Plugs**
- 1 Cleat**
- 2 Screws**
- 2 Telescoping Tubing for Door Pocket**

**READ DIRECTION COMPLETELY BEFORE BEGINNING**

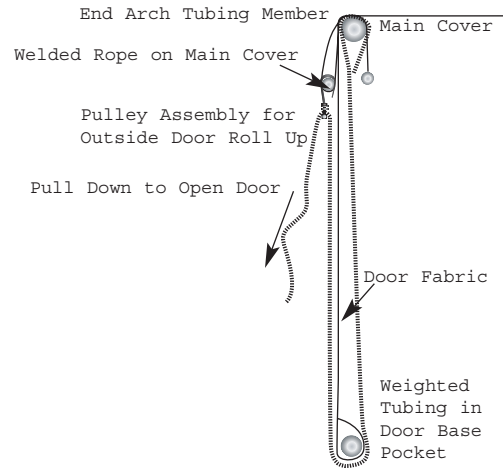

### PREPARE AND INSTALL DOOR BASE POCKET TUBING

There are two pipes provided for each Roll Up Door. Insert swaged end of one into the female end of the second pipe. Secure with self-tapping screw provided. Fill pipe with sand and secure with a Black plastic insert on each end. Insert weighted tubing assembly into Pocket along Bottom edge of Roll Up Door.



### ATTACHING PULLEYS TO MAIN COVER


The two (2) pulleys should be installed on the outside edge of the Main Cover, with the clips of the pulley hung over the welded-in rope. The Pulleys should be attached 6-12" inside the zippers evenly along welded-in rope. Measure into the center of the unit from each zipper to locate pulleys properly. Using a razor knife, cut a vertical 1/2" slot over the rope channel.



STEP 3

## ATTACH ROPE HOLDBACK CLEAT

The Cleat to hold the ropes attaches to the end arch tube member along the vertical side of the unit. Locate the holdback cleat vertically on the tubing where they will be easily accessible to operate. Drill two small pilot holes in the tubing, and use the two self-tapping screws provided to secure the cleat to the tubing.

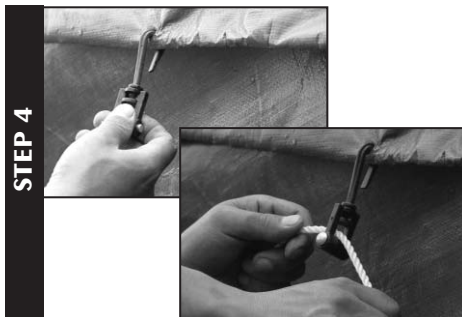

STEP 4

## INSTALL ROPE

Determine the middle of the rope provided and cut the rope into two pieces. Attach the ropes directly over the end arch tubing frame at the top, inside the door and aligned with the pulleys. Tie the ends into a square knot to avoid slipping later.

Run the two ropes along the inside of the door and then under the door to the outside of the unit. Thread the rope up through the pulleys and back down as illustrated.




STEP 5

## ROLL UP DOOR

Standing either inside or outside of unit as selected, pull the two rope ends to the side of the door, near the cleat. Pulling the ropes together, door will start to roll up. Door may need an adjustment getting started to 'roll' rather than bunch up. Once it has been rolled a few times PE material will develop a memory to roll. Pull ropes to open door to any position or level needed. Wind ropes around double ended cleat to secure.

If there is an excess of Rope, do not trim rope until door has been opened and closed several times. Rope should only be trimmed if necessary when door is in closed position. Leave 2-3' of rope beyond cleat location as a minimum.

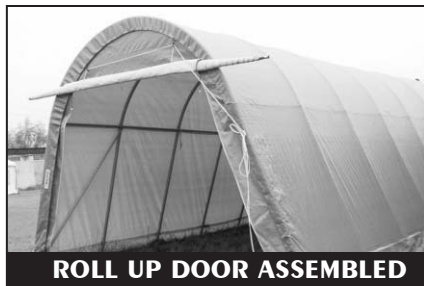

ROLL UP DOOR ASSEMBLED

Produced & Distributed by:  
MDM Products, LLC  
410 Surf Avenue Stratford, CT 06615 USA  
Toll Free: 800.447.7079  
Tele: 203.380.2716  
Fax: 203.380.2716